


ZFV Wiring Instructions


CONNECTIONS (Type: ZFV32SMAH1A40 & ZFV55SMAH1A40)

Non Polarised Isolator

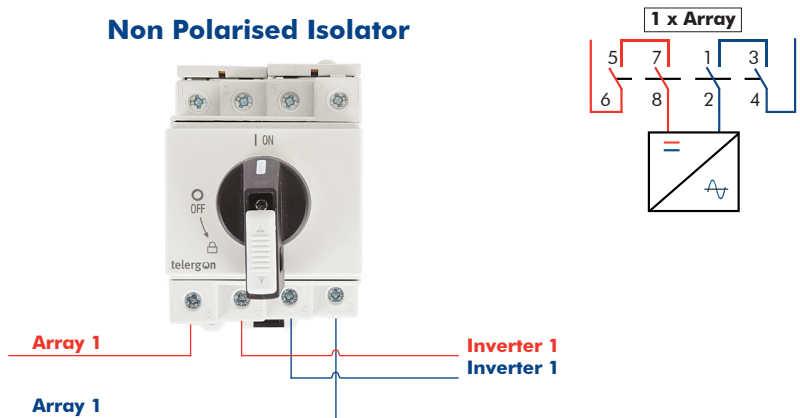

Note:
to be installed by a licensed electrician.

CONNECTIONS

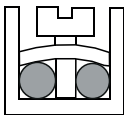

	ZFV32	ZFV55
Stranded or solid cable	4 - 16mm ²	4 - 25mm ²
Flexible cable	4 - 10mm ²	4 - 16mm ²
Tightening torque	1.2 - 1.8Nm	2.5 - 3Nm

FINAL CHECKLIST PRIOR TO ENERGISING


- Check correct cable / terminal combination, APPLICATION.
- Check correct terminal tightening torque applied, SCREW TENSION.
- Check cable is tight in terminal, and secure.
- Cable strain relief to AS3000 with no excess stress on terminals.
- Switch electrical test to AS5033.

Note:
For safety and reliability a yearly maintenance routine is necessary. Refer AS/NZS5033, appendix C.

ZFV Wiring Instructions


CONNECTIONS (Type: ZFV32SMAH1A40 & ZFV55SMAH1A40)

Non Polarised Isolator

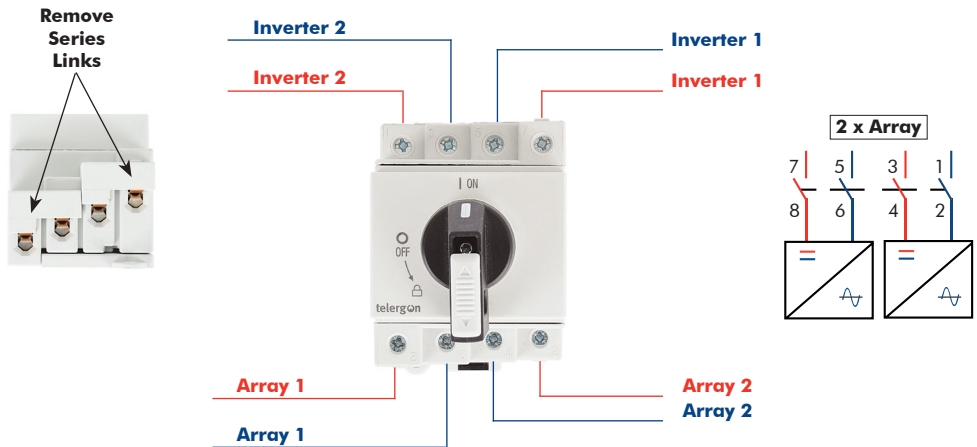

Note:
to be installed by a licensed electrician.

 CONNECTIONS



	ZFV32	ZFV55
Stranded or solid cable	4 - 16mm ²	4 - 25mm ²
Flexible cable	4 - 10mm ²	4 - 16mm ²
Tightening torque	1.2 - 1.8Nm	2.5 - 3Nm

FINAL CHECKLIST PRIOR TO ENERGISING

- Check correct cable / terminal combination, APPLICATION.
- Check correct terminal tightening torque applied, SCREW TENSION.
- Check cable is tight in terminal, and secure.
- Cable strain relief to AS3000 with no excess stress on terminals.
- Switch electrical test to AS5033.

Note:
For safety and reliability a yearly maintenance routine is necessary. Refer AS/NZS5033, appendix C.